

# AECO RCA PLUG ARP-1512


---

## Assembly

1. Peel off the cable jacket and per conductor wire insulation.
2. Depends on cable size to decide whether use sleeve (ID9.0mm)[6], or without sleeve (ID11.5mm)[5]. Then through into cable.
3. Soldering each channel conductors : positive [3] and negative [4].
4. If you choose to remove the conductors for soldering, please refer to the detail as picture.
- 4.1 To assemble the body set, place the C-ring [2], centre pin [3] and ground pin [4] into the lower cover body [11] in order and close the upper cover body [12].
5. Locking screw the body set to shell [5].
6. Locking screw the shell to the cable with M3x4mm [72] or M3x3mm [71] screws.

## Montering

1. Dra av kabelmanteln och isoleringen per ledare.
2. Beror på kabelstorlek för att avgöra om man använder hylsa (ID9.0mm)[6] eller utan hylsa (ID11.5mm)[5]. Sedan genom in i kabeln.
3. Lödning av varje kanalledare: positiva [3] och negativa [4].
4. Om du väljer att ta bort ledarna för lödning, se detaljen som bild.
- 4.1 För att montera kroppssatsen, placera C-ringen [2], mittstiftet [3] och jordstiftet [4] i den nedre kåpan [11] i ordning och stäng den övre kåpan [12].
5. Låsskruv kroppen inställd på skalet [5].
6. Låsskruvar skalet på kabeln med M3x4mm [72] eller M3x3mm [71] skruvar.

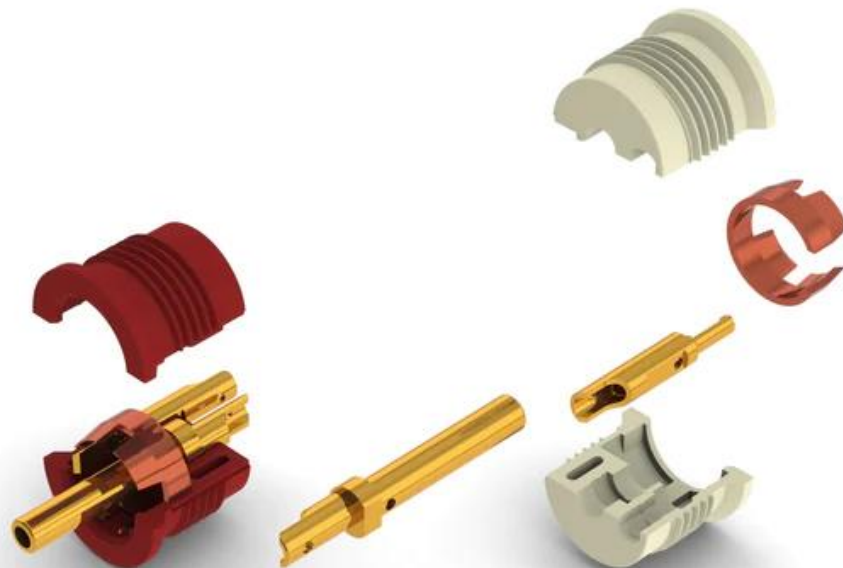

# AECO RCA PLUG ARP-1512

